
Zitrux compact

Cleaning Method

zumex®

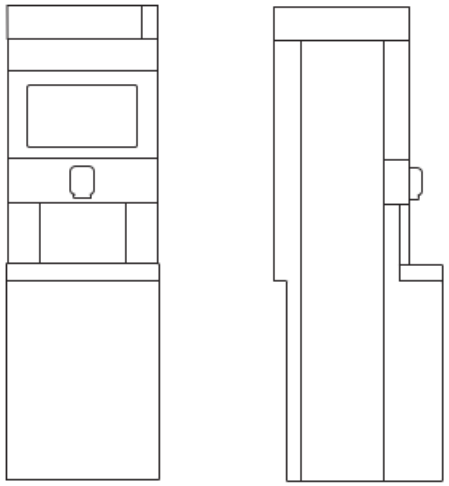

Index


01 Machine Exploded Views

Functional components of the machine.

02 Maintenance / Cleaning step by step

Before the opening
Daytime maintenance
End-of-Day Cleaning
Weekly/monthly cleaning

Machine Exploded Views

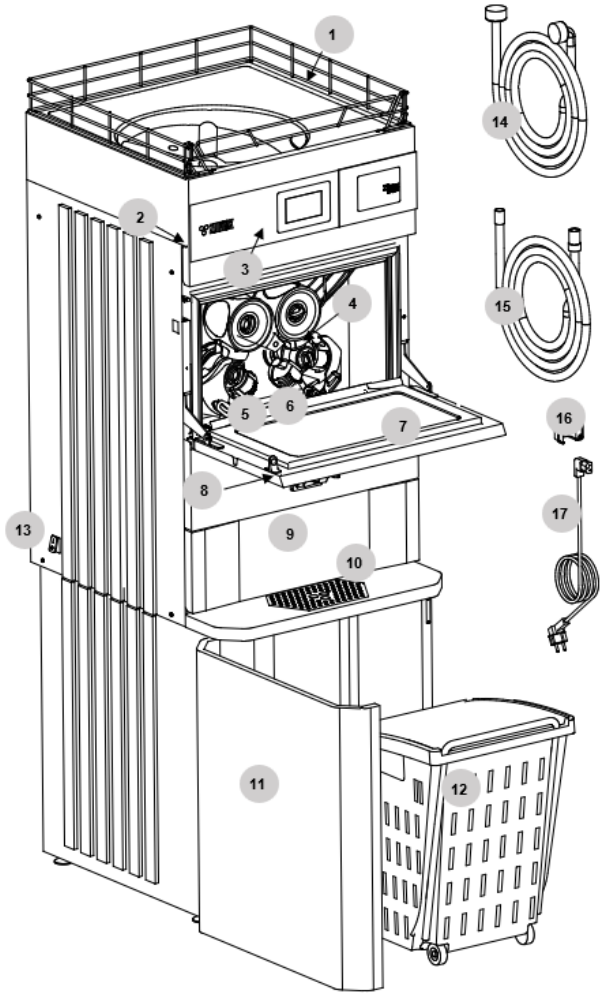

1	Feeder
2	Signal light
3	Display
4	Juice extraction system
5	PulpOut System
6	Juice tray
7	Juicer door
8	Tap
9	Filter-Peel outlet zone
10	Drip tray
11	Waste bin door
12	Waste bin
13	Main switch
14	Water inlet hose
15	Drain hose
16	Cable protector
17	Main Cable


Pictograms

Consult User Manual

Usage Tips/Practices

Zumex Recommendation

Warning

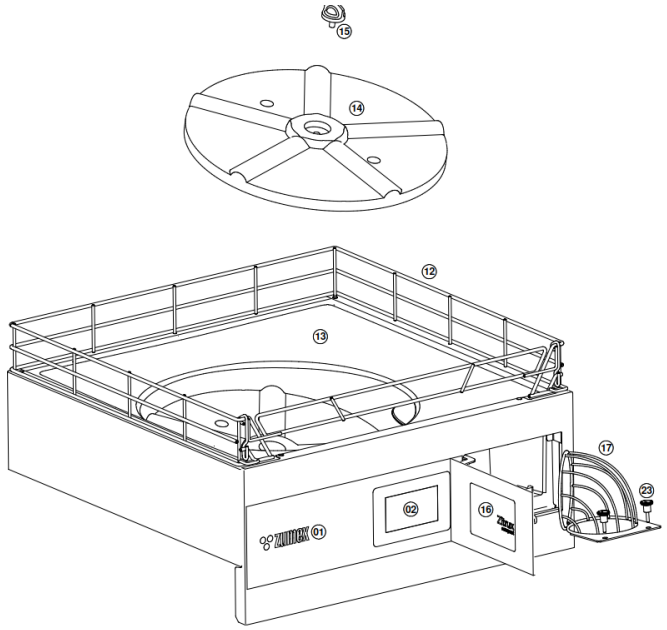

1.1	Feeder basket door
1.2	Feeder basket
1.3	Feeder
1.4	Feeder plate
1.5	Securing knob
1.6	Feeder tube window
1.7	Upper feeder tube
1.8	Feeder securing knob

Standard Operating Procedure

Required cleaning supplies



Citric Active



Trash bags



Brush



Paper



Cloth



Lifting equipment

Before opening


After the last sanitization of the night


WHAT







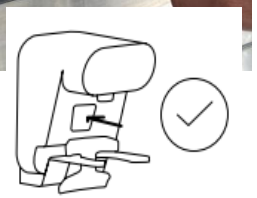

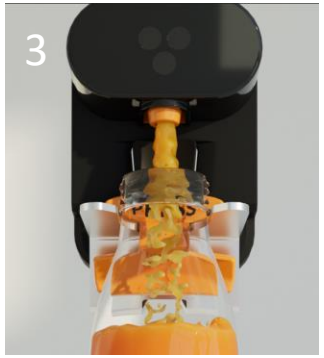

HOW

1. After the sanitization process from the previous day, the machine will display a notification prompting you to check the filter. Open the Filter-Peel Outlet Zone (9) and remove the filter to check for seeds or pulp. Clean the filter by removing any residues and disposing of them in the waste bin. Then, reinsert the filter and press Restart on the display.

2. Insert the tap return box (8) to place it in the dosing position. The machine will then be ready to juice.

3. Insert (12) empty bucket with bag.

It is advisable to discard the first half glass of juice so that the machine removes traces of water that may be present in the squeezing system.


Daytime maintenance

WHAT







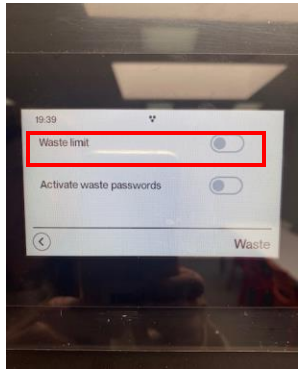

HOW

1. Clean the glass of the squeeze door (7) with a damp single-use paper, as well as to clean the drip tray area (10) with a clean cloth and Citric Active©.

2. Empty the bin, if it is full.

You can use the Waste Limit functionality from the Settings menu to schedule the machine to stop when the waste bin reaches a specified number of squeezed oranges.

End-of-Day Cleaning


Before starting the automatic sanitization process


WHAT







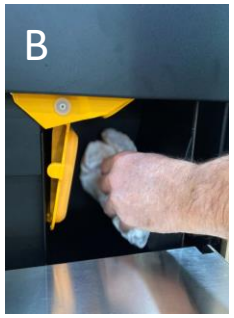

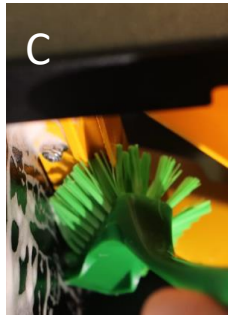





HOW

1. Open the squeeze door (7) and remove the oranges contained in the feeder tube.

2. Check the left and right peel fall areas for any peels inside the capsule and remove them if necessary.

3. Open the Filter-Peel Outlet Zone and spray with Citric Active©. A. Remove any residues using the brush. B. Then, wipe the edges of the capsule covers with a clean cloth. C. Finally, use the brush to clean the inner edges of the covers.

4. Remove the waste bin and replace the trash bag with a new one.

5. Visually check that there is sufficient detergent available for the cleaning process. Return the waste bin to its original position.


The machine has an automatic warning that tells you when the detergent bottle has counted the maximum number of washes. Consult manual to use this tool.

End-of-Day Cleaning


Sanitization

WHAT



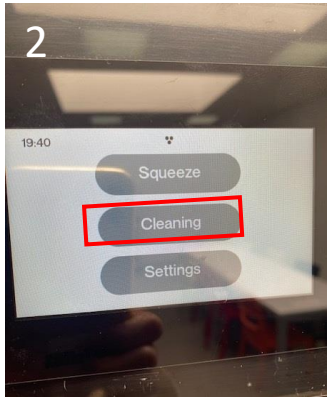



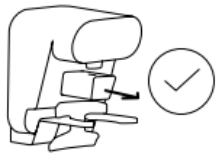

HOW

1. Access the Main Menu by pressing the Display for a few seconds and entering PIN 123.


2. Access the Cleaning Menu, then click on Cleaning.

3. Extract the return box of the tap to place it in the washing position.

4. Press **Start.**

Weekly maintenance

When the last cleaning process of the week is completed, carry out the maintenance and cleaning of the **feeder** and the **capsule base**.

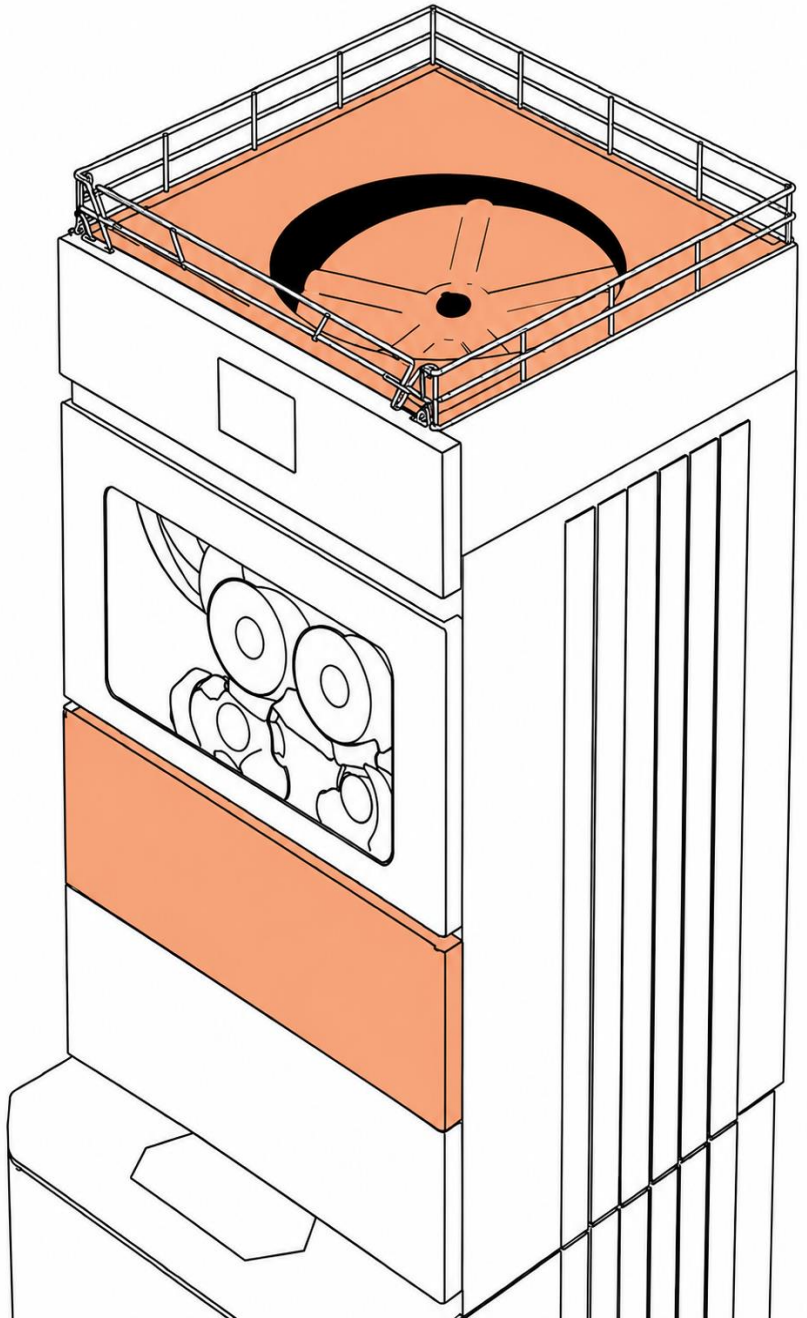

Weekly cleaning

Disassemble the feeder

WHAT







HOW

1. First, clean the filter by opening the Filter-Peel Outlet Zone (9). Then, reinsert the filter and press Restart on the display.


2. In the feeder, unscrew the central knob to remove the feeder plate. Use lifting equipment if necessary.

3. Place the plate in the dishwasher.

Weekly cleaning

Disassemble the juicing system components

WHAT

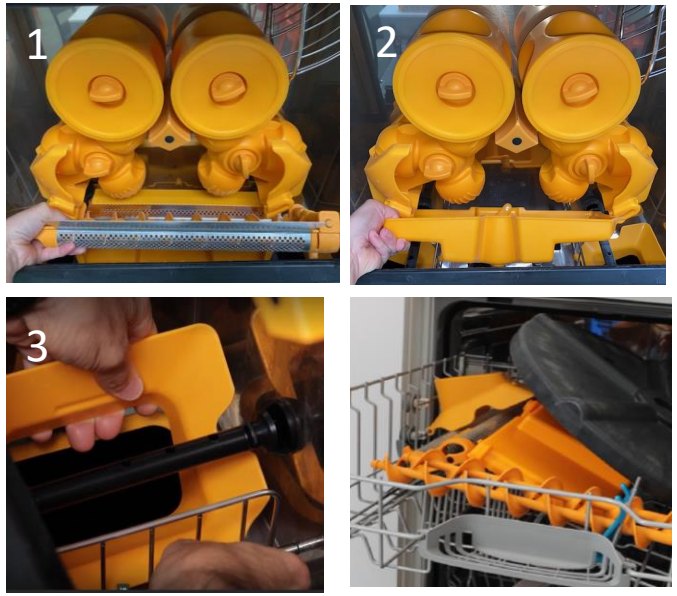

HOW

1. Open the squeezing door and remove the PulpOut filter by slightly lifting the front of the piece.

2. Remove the juice tray following the same procedure.

3. Remove the mobile peel chutes and place them in the dishwasher with the rest of the pieces to start the wash cycle, or clean them by hand.

Weekly cleaning


Clean the feeder and the juicing capsule base

WHAT









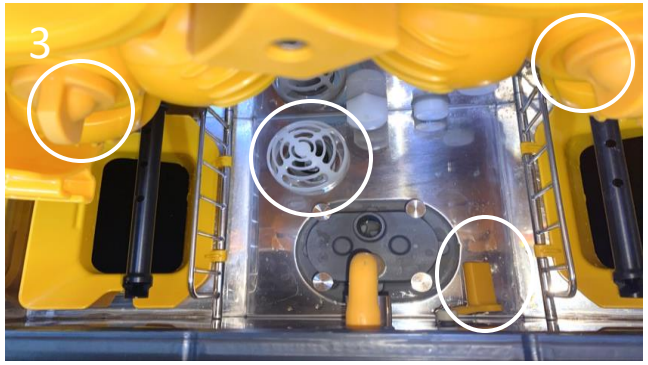



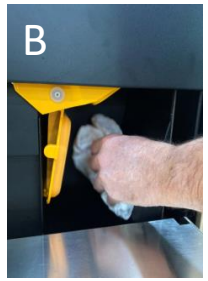

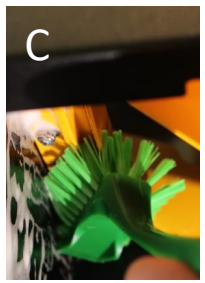

HOW

1. While the parts are being washed, open the feeder access door and remove the feeder elbow for cleaning. Also clean the area with Citric Active© and a cloth.

2. Clean the feeder to remove wax and juice residues using Citric Active© and a damp cloth. Allow the product to act for at least 3 minutes.


3. Tighten the 4 knobs of the squeezing pressing units in case they have been loosened. Check drains and buoys to see that there are no pieces of peels blocking them. Then, proceed to clean the capsule base with Citric Active© and a damp cloth.

4. Open the Filter-Peel Outlet Zone and spray with Citric Active©. A. Remove any residues using the brush. B. Then, wipe the edges of the capsule covers with a clean cloth. C. Finally, use the brush to clean the inner edges of the covers.

Weekly cleaning

Reassemble the feeder and juicing capsule components

WHAT

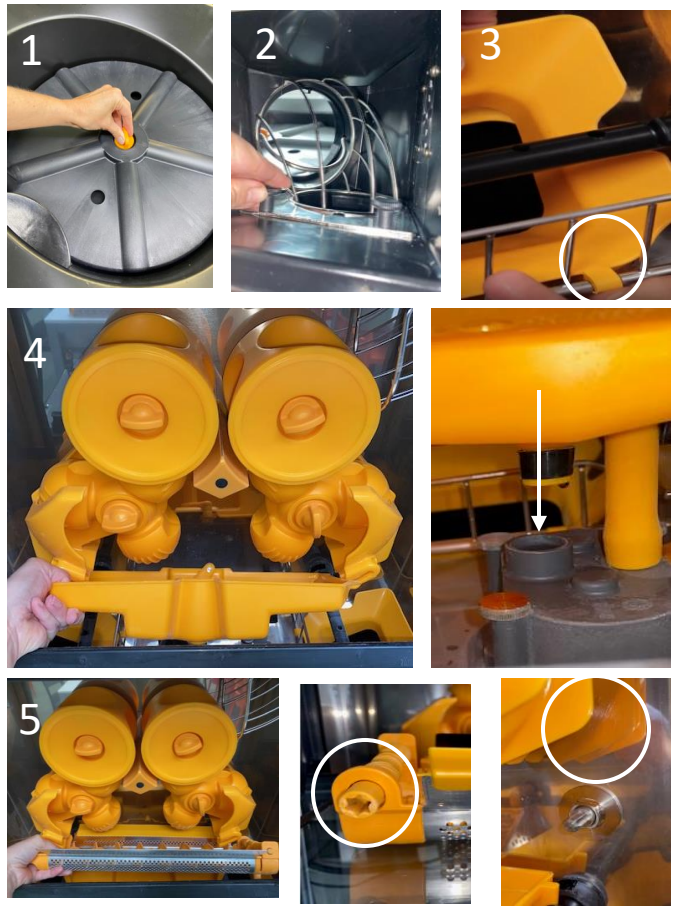

HOW

Once the dishwasher cycle is complete, it is important to reinsert **all parts** in reverse order to ensure the machine operates correctly.

1. Reinsert the feeder plate, ensuring that it is correctly fitted.

2. Reinstall the feeder elbow.

3. Reinstall the mobile peel chutes.

4. Reinsert the juice tray, inserting the black spout into the grey hole of the dosing pump.


5. Reinsert the PulpOut filter by inserting the roller into the star-shaped shaft.

Weekly cleaning


Rinsing

WHAT



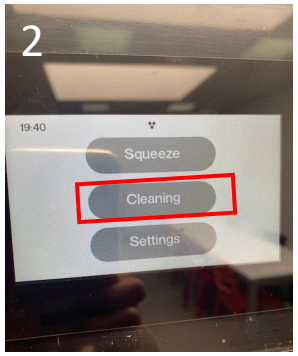



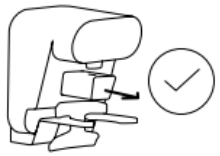

HOW

We recommend performing a Rinse cycle from the **Cleaning** menu --> **Rinse**, to remove any detergent residue remaining in the capsule.

1. Access the Main Menu by pressing the Display for a few seconds and entering PIN 123.


2. Access the Cleaning Menu, then click on **Rinsing**.

3. Extract the return box of the tap to place it in the washing position.

4. Press **Start.**

Monthly cleaning


At least once a month, also disassemble the **Juicing System** and the **Inner Feeder Tube**, and thoroughly clean the entire capsule, paying special attention to the **upper part**

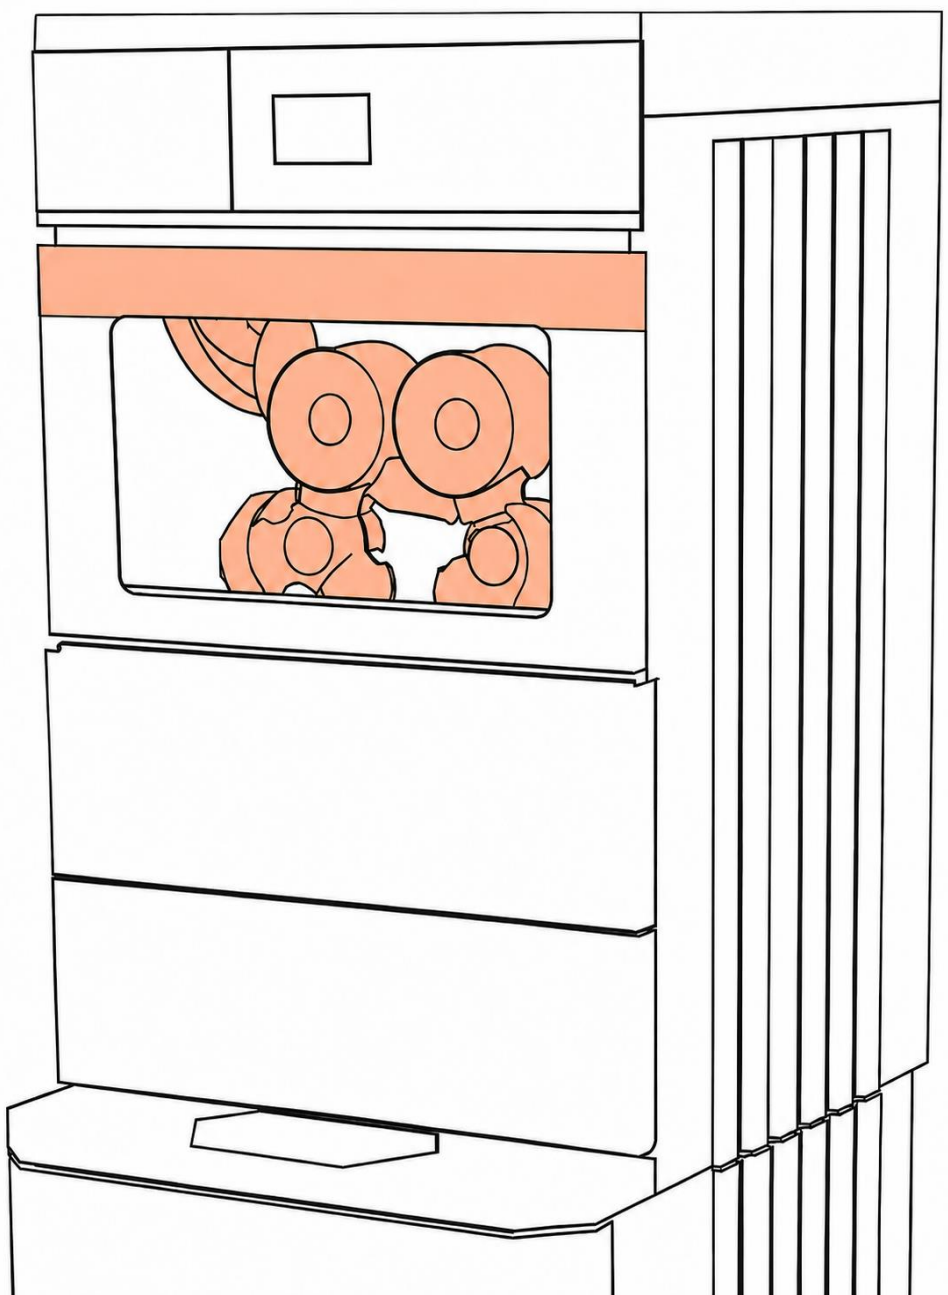

Monthly cleaning

Disassemble juicing system

WHAT

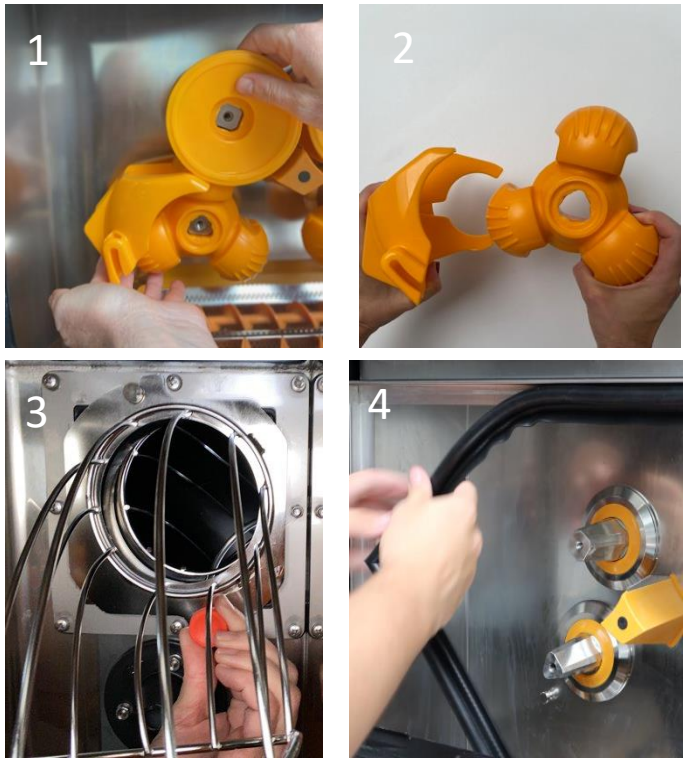

HOW

1. Open the squeezing door (7) Disassemble the squeezing pressing units in pairs by first unscrewing the handwheels that hold them. Lift the peel ejector and remove the three pieces by sliding through the shaft

2. Then remove the peel ejectors by gently pulling them away from the pressing unit.


3. Disassemble the internal feed elbow for cleaning, unscrewing the knob that holds it.


4. Remove the gasket from the squeezing door and place it in the dishwasher with the rest of the parts, or clean it by hand.

Monthly cleaning

Clean the juicing capsule

WHAT

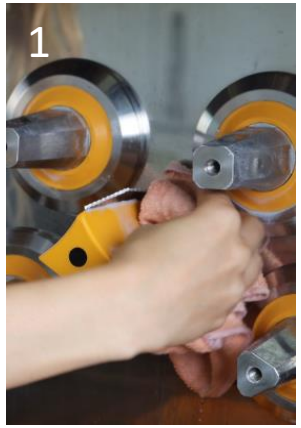

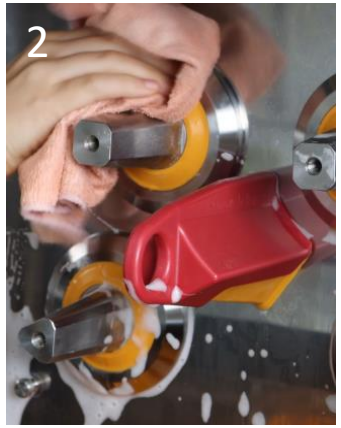



HOW

While **all parts** are being washed, proceed with the cleaning of the non-removable components.

1. Clean the blade using Citric Active© and a damp towel.

2. Clean the stainless-steel front of the capsule and the shafts with Citric Active ©. Allow the product to act for at least 3 minutes.

3. Using a damp cloth, clean the upper inner part of the capsule. Pay special attention to the corners and use a brush if necessary.

WARNING! Take special care when cleaning the blade to avoid cuts or damage. Once the blade has been cleaned, place the protective cover on the blade to prevent accidents.


Monthly cleaning

Reassemble the juicing capsule components

WHAT





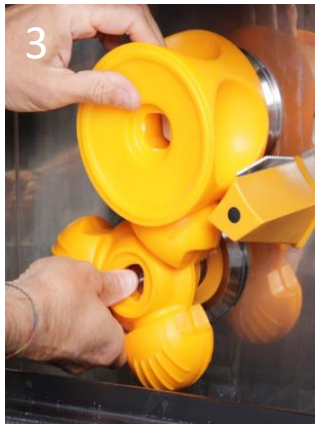



A (OK)

HOW

Once the dishwasher cycle is complete, reassemble the removed parts in reverse order, paying special attention to the assembly of the squeezing drums and peel ejectors.

1. Reinsert the gasket and press it with your fingers to ensure it is correctly positioned.

2. Install the inner feeder elbow and tighten the orange knob to ensure it is properly secured.


3. Reinstall the squeezing units in pairs, making sure the peel ejectors are correctly positioned. To do this, lift the peel ejector while inserting it onto the shaft so that it is correctly seated in position (A).

Monthly cleaning


Rinsing

QUÉ



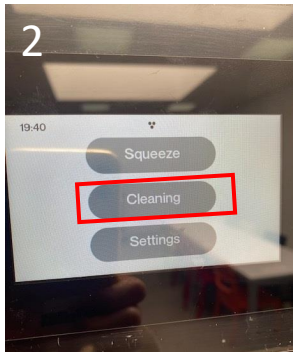



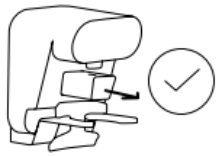

CÓMO

We recommend performing a Rinse cycle from the **Cleaning** menu --> **Rinse**, to remove any detergent residue remaining in the capsule.

1. Access the Main Menu by pressing the Display for a few seconds and entering PIN 123.

2. Access the Cleaning Menu, then click on **Rinsing**.

3. Extract the return box of the tap to place it in the washing position.

4. Press **Start.**