

Cleaning Instructions Speed Pomegranates

ATTENTION! For proper cleaning, the following steps must be followed. Before starting, disconnect the machine from the power supply.



1 Remove the basket from the feeder.



2 Remove the feeder plate by unscrewing the central knob.



3 Remove the pulp cover.



4 Turn the knobs toward you counterclockwise until they are in a vertical position and remove the side outlets.



5 Turn the knobs 90 degrees until they are aligned with the holes in the cover. Remove the cover.



6 Remove the automatic PulpOut system by lifting the assembly from the part closest to you.



7 Remove the Speed Up tap by unscrewing it easily.



8 Remove the stainless steel bark traps.



9 -Press the side latches to remove the bucket.



10 Remove the blade by pressing in the center and pulling the handle toward you. **Caution!** Be careful with the cutting area.



11 Remove the bark extractor wedges from their supports.



12 Unscrew the flywheels and remove the drums in pairs.



13 Clean the front of the machine following the steps indicated and removing all particles that have adhered to it



14 Remove the waste buckets from the podium to empty their contents.



15 Remove the filter tray and proceed to clean the inside of the podium.

The cleaning process for each of the machine's components is explained in detail below.

Component cleaning instructions



Warnings and cleaning and sanitizing steps

All elements that come into contact with the juice must be cleaned daily.



All parts, except for the cover and tap, can be placed in the dishwasher for washing.



The juicing area and its removable components must be cleaned using Citric Active*. Leave it to act for one minute and then remove any remaining dirt with a damp sponge. Do not use scouring pads that could scratch the surfaces.

*Food-grade detergent specifically for Zumex juicers.



After the first rinse, sanitize with hydroalcoholic disinfectant** and leave to stand for 1 minute.



Rinse thoroughly with water after sanitizing to remove any traces of disinfectant.



Dry the parts completely.

**Recommended food-grade disinfectant.

Daily cleaning

Blade, sub-filter, tray, peel traps, feed plate, front cover, and tap



1 Spray the parts with Citric Active and leave for 30 seconds.



2 Follow the cleaning process indicated for all parts: blade, sub-filter, bucket, crust drops, etc.



3 Wash the cover following the steps indicated and removing all particles that have adhered to it.



4 Wash the feed plate with Citric Active and a soft sponge, removing all particles that have adhered to it.




5 Remove the top part of the tap and clean the inside with the brush provided.

Component cleaning instructions


Automatic PulpOut system



1 Remove the black top cover by pressing on the protruding tabs to lift it off.

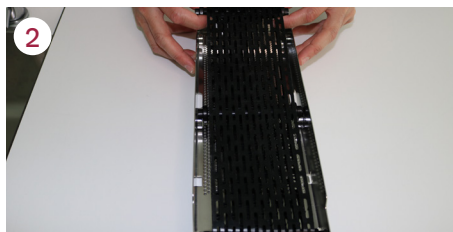

2 Turn the unit upside down and place your fingers on the roller of the sweeping belt, pushing outwards to release it

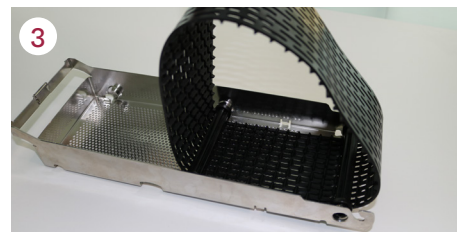

3 Remove the sweep belt together with the other roller and remove both parts.




4 Clean the sweep belt and the rest of the Pulp Out components following the cleaning steps indicated.




5 All parts can also be washed in the dishwasher.

Assembly instructions


Automatic PulpOut System

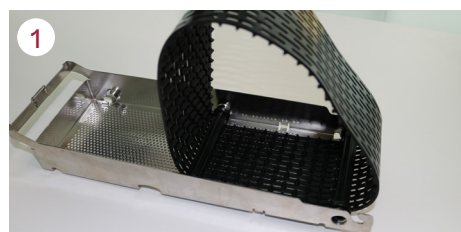

1 Insert the scraper belt with the roller into the stainless steel tray.

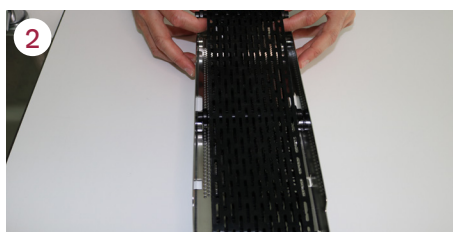

2 From the reverse side, grasp the scraper belt together with the other roller and pull it toward the other end until it is positioned in the guides.

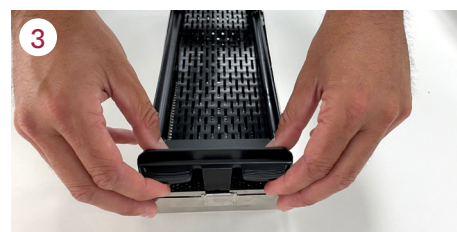

3 Place the top cover facing the pins in the slots on the frame and press the opposite side until it clips into place.

Component cleaning instructions

Midday cleaning

Cover, juicing unit, and PulpOut system



1 Turn the knobs toward you counterclockwise until they are vertical, and remove the side outlets.



2 Turn the knobs 90 degrees until they are aligned with the holes in the cover. Remove the cover.



3 Remove the automatic PulpOut System by lifting the assembly from the part closest to you.



4 Remove the blade by pressing in the center and pulling the handle toward you. Caution! Be careful with the cutting area.



5 Remove the bark extractor wedges from their supports.



6 Unscrew the flywheels and remove the drums in pairs.



7 Clean the front of the machine following the instructions described above.

To clean the removed components, follow the general daily cleaning instructions.

Replacement parts.

For quick mid-shift cleaning, we recommend having a replacement parts kit on hand. This kit consists of: cover, squeezing unit, and PulpOut system.

Assembly instructions



1

Insert the filter tray.



2

Assemble the drums in pairs and screw on the flywheels.



3

Insert the peel extractor wedges into their supports.



4

Insert the blade, pressing down until you feel the clip.



5

Clip on the juice container, making sure the latches are on the outside.



6

Place the stainless steel pulp outlets on both sides.



7

Place the tap together with the bottle holder, screwing both pieces together.



8

Place the PulpOut System on the machine, paying attention to the guides.



9

Insert the cover and turn the locking knobs 90°.



10

Align the bottom of the side outlet and lift the top, securing the closure with a 90° turn of the knob.



11

Insert the Pulp cover



12

Assemble the feed plate by screwing in the central knob.



13

Assemble the feed basket.



14

Place the waste bins with new trash bags on the podium.